

MANUAL DEREGISTRATION CODE

CONNECTING			Deregistration Process:
CS6209	LS6205	DS6201	*331734#(MENU/SELECT)
CS6219	LS6215	DS6211	
CS6219-2	LS6215-2	DS6211-2	
CS6219-3	LS6215-3	DS6211-3	
CS6219-4	LS6215-4	DS6211-4	
CS6219-5	LS6215-5	DS6211-5	
CS6228-3	LS6225	DS6221	
CS6228-5	LS6225-2	DS6221-2	
CS6228-6	LS6225-3	DS6221-3	
CS6229	LS6225-4	DS6221-4	
CS6229-2	LS6225-5	DS6221-5	
CS6229-3	LS6226-2	DS6222-4	
CS6229-4		DS6222-5	
CS6229-5			

OOR or No pwr at base			Deregistration Process:
DS6301	LS6325/LS6326-X	IS71X1-X	*331734#(MENU/SELECT) <i>NOTE: *2010 Models LS6245/LS6204, DS6151/6101 Press *331734# + left softkey</i>
DS6311-2	LS6375-X		
DS6321-2	LS642X-X /LS6475-X		
DS6321-3			
DS6321-4			
DS6322-2			
DS6322-3			
DS6322-4			
DS6151*			
DS6101*			
DS642X-X			
DS6671-X			

MANUAL DEREGISTRATION CODE

OOR or No pwr at base	Deregistration Process:
DE Platform - CS632X-X	<ol style="list-style-type: none"> 1. Press Menu/Select. Display reads: Play messages if it has a TAS or Directory if not. 2. Enter *7890#. Display reads: >Test Base Test Handset 3. Scroll to >Test Handset; press Menu/Select. Display reads: >SW Version. 4. Scroll to >Register Clear; press Menu/Select. 5. Display reads: Reg Clear ?AR on top line. Press Menu/Select. 6. Display reads: OKClear ?AR on top line. Press and hold OFF until Out of range OR No pwr at base is displayed. 7. Unplug battery/s; wait a few seconds, then reconnect. 8. The registration instructions will appear on the display. Register the handset as you normally would.
DE Platform - CS642X-X, DS6522-32 & CS652X-X, CS662X-X, CS664X-X, CS67X9-X and CS68X9-X.	<ol style="list-style-type: none"> 1. Press Menu/Select. Display reads: Play messages if it has a TAS or Directory if not. 2. Enter *7890#. Display reads: >Test Base Test Handset 3. Scroll to >Test Handset; press Menu/Select. Display reads: >SW Version. 4. Scroll to >Next Page...; press Menu/Select. 5. Display reads: LCD TEST on top line. Scroll to >Register Clear, Press Menu/Select. 6. Display reads: Reg Clear? Press Menu/Select. Press and hold OFF until Out of range OR No pwr at base is displayed. 7. Unplug battery/s; wait a few seconds, then reconnect. 8. The registration instructions will appear on the display. Register the handset as you normally would.
SN6166/SN6167	VOL+, Phone (TALK key), VOL-, Phone (TALK key), VOL+, VOL-, and Phone (TALK key)

MANUAL DEREGISTRATION CODE

NO DISPLAY	Deregistration Process:
IS6100	Remove the headset from its base and press the key sequence: VOL+, MUTE, VOL-, and MUTE. VOL+, VOL-, MUTE. The headset LED will flash blue and orange indicating it is not registered.